



L 60060 TL 1
L 60260 TL 1

EN User manual



 **AEG**
perfekt in form und funktion

CONTENTS

1. SAFETY INFORMATION	3
2. SAFETY INSTRUCTIONS	4
3. PRODUCT DESCRIPTION	6
4. ACCESSORIES	6
5. CONTROL PANEL	7
6. WASHING PROGRAMMES	9
7. CONSUMPTION VALUES	12
8. BEFORE FIRST USE	13
9. USING THE APPLIANCE	13
10. HELPFUL HINTS AND TIPS	17
11. CARE AND CLEANING	18
12. TROUBLESHOOTING	21
13. TECHNICAL INFORMATION	23

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.aeg.com



Register your product for better service:
www.aeg.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.aeg.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.
When contacting Service, ensure that you have the following data available.
The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 General Safety

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Do not change the specification of this appliance.
- Obey the maximum load volume of 6 kg (refer to the "Programme chart" chapter).

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The operating water pressure (minimum and maximum) must be between 0,5 bar (0,05 MPa) and 8 bar (0,8 MPa)
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging and the transit bolts.
- Keep the transit bolts. When you move the appliance again you must block the drum.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature is less than 0 °C or where it is exposed to the weather.
- Obey the installation instruction supplied with the appliance.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Do not install the appliance where the appliance door can not be fully opened.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Make sure that there is air circulation between the appliance and the floor.
- Adjust the feet to have the necessary space between the appliance and the carpet.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shock-proof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

Water connection

- Make sure not to cause damage to the water hoses.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.
- Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean.
- The first time you use the appliance, make sure that there is no leakage.

2.2 Use



WARNING!

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not change the specification of this appliance.
- Obey the safety instructions on the detergent packaging.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Make sure that you remove all metal objects from the laundry.
- Do not put a container to collect possible water leakage under the appli-

ance. Contact the Service to ensure which accessories can be used.

2.3 Care and Cleaning



WARNING!


Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

2.4 Discard the appliance


1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.
3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances).

3. PRODUCT DESCRIPTION

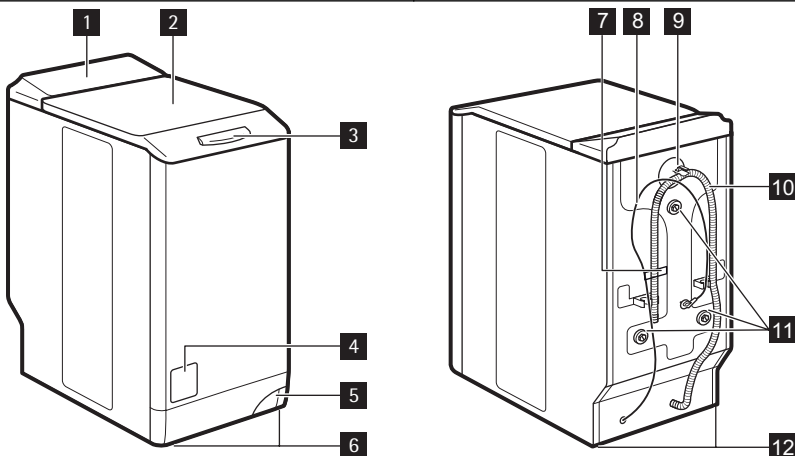


- | | |
|--------------------------------------|--|
| 1 Control panel | 7 Rating plate |
| 2 Lid | 8 Mains cable |
| 3 Lid handle | 9 Water inlet valve |
| 4 Filter access door | 10 Water drain hose |
| 5 Lever to move the appliance | 11 Transit bolts |
| 6 Adjustable feet | 12 Feet for the appliance level |


4. ACCESSORIES

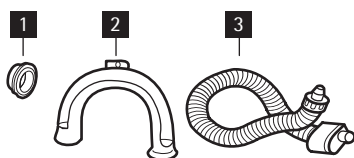

- | | |
|---------------------------------------|---|
| 1 Plastic cap | To close the hole on the rear side of the cabinet, after the removal of the transit bolt. |
| 2 Plastic hose guide | To connect the drain hose on the edge of a sink. |
| 3 Anti-flood inlet hose | To prevent possible leakage. |

5. CONTROL PANEL

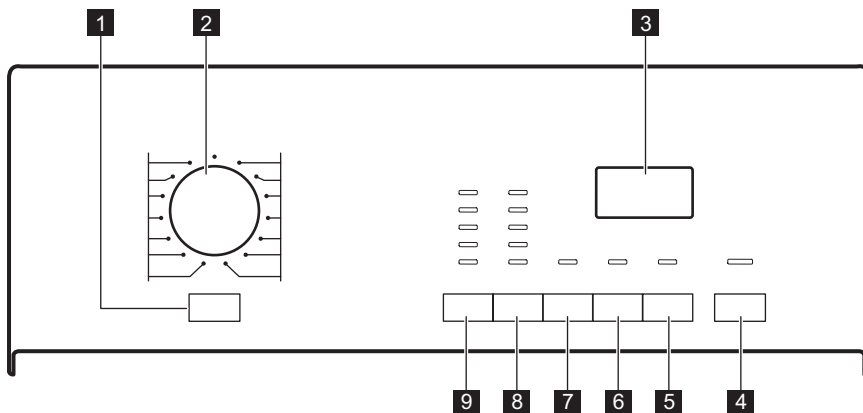

- 1** On/Off button
- 2** Programme knob
- 3** Display
- 4** Start/Pause button 
- 5** Delay start button 
- 6** Time saving button 
- 7** Liquid detergent button 
- 8** Spin button 
- 9** Temperature button 

The AUTO Stand-by function automatically deactivates the appliance to decrease the energy consumption when:

- You do not use the appliance for 5 minutes before you press button **4**.
 - All settings are cancelled.
 - Press button **1** to activate the appliance again.
 - Set again the washing programme and all possible options.
- After 5 minutes from the end of the washing programme. Refer to 'At the end of programme'.


5.1 On Off button **1**

Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated.




5.2 Programme knob **2**

Turn this knob to set a programme.

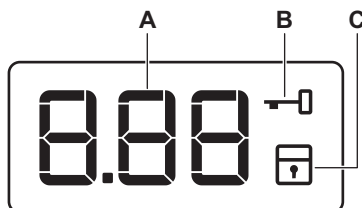5.3 Display **3**



The display shows:

A	<ul style="list-style-type: none">• The programme time When the programme starts, the time decreases with steps of 1 minute.• The delay start When you press the delay start button, the display shows the delay start time.• Alarm codes If the appliance has a malfunction, the display shows alarm codes. Refer to 'Troubleshooting' chapter.• Err The display shows this message for some seconds if:<ul style="list-style-type: none">– You set a function that is not applicable for the programme.– You change the programme while it operates.The indicator of the Start/Pause button 4 flashes.•  When the programme is completed.
B	 Door lock You cannot open the appliance door when the symbol is on. You can open the door only when the symbol goes off. If the programme is completed but the symbol stays on: <ul style="list-style-type: none">• There is water in the drum.• The 'Rinse Hold' function is on.
C	 The child lock symbol The symbol comes on when you activate this device.

5.4 Start/Pause button **4**

Press button **4** to start or interrupt a programme.

5.5 Delay start button **5**

Press button **5** to delay the start of a programme from 30 minutes to 20 hours.

5.6 Time save button **6**

Press the button **6** to decrease the programme duration.

- Press one time to set 'Shortened duration' for items with daily soil.
- Press two times to set 'Extra Quick' for items with almost no soil.



Some programmes accept only one of the two functions.

5.7 Liquid detergent button **7**

Press button **7** to adapt the cycle if you use a liquid detergent.


5.8 Spin button **8**

Press this button to:

- Decrease the maximum speed of the spin phase of the programme.
- Activate the 'Rinse Hold' function. Set this function to prevent fabric creases. The appliance does not drain the water when the programme is completed.








	'Rinse Hold' function is on.
--	------------------------------


5.9 Temperature button

Press button  to change the default temperature.

5.10 Child lock function




 


This function prevents children to play with the control panel.

- To activate the function, press button  and button  at the same time until the display shows the symbol .
 - To deactivate the function, press button  and button  at the same time until the symbol  goes off.
- You can activate the function:
- Before you press the Start/Pause button : the appliance cannot start.






- After you press the Start/Pause button , all the buttons and the programme knob are deactivated.








5.11 Permanent extra rinse function




With this function you can keep the extra rinse function permanently on when you set a new programme.

- To activate the function press button  and button  at the same time until the indicator  is on.
- To deactivate the function press button  and button  at the same time until the indicator  is off.

6. WASHING PROGRAMMES

Programme Temperature	Type of load max. weight of load	Cycle description	Functions
 Cottons 95° - Cold	White and coloured cotton with normal soil. max. 6 kg	Wash Rinses Long spin	SPIN REDUC- TION RINSE HOLD LIQUID DETER- GENT EXTRA RINSE TIME SAVE ¹⁾
  Cottons + Pre- wash 95° - Cold	White and coloured cotton with heavy soil. max. 6 kg	Prewash Wash Rinses Long spin	SPIN REDUC- TION RINSE HOLD LIQUID DETER- GENT EXTRA RINSE TIME SAVE ¹⁾
  Cottons + Stain 95° - 40°	White and coloured cotton with heavy soil. max. 6 kg	Wash Rinses Long spin	SPIN REDUC- TION RINSE HOLD LIQUID DETER- GENT EXTRA RINSE TIME SAVE ¹⁾

Programme Temperature	Type of load max. weight of load	Cycle description	Functions
 Synthetics 60° - Cold	Synthetic or mixed fabric items with normal level of soil. max. 2,5 kg	Wash Rinses Short spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE TIME SAVE ¹⁾
 Easy Iron ²⁾ 60° - Cold	Synthetic fabric items with normal soil. max. 1 kg	Wash Rinses Short spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE TIME SAVE ¹⁾
 Delicates 40° - Cold	Delicate fabrics as acrylics, viscose, polyester items with normal soil. max. 2,5 kg	Wash Rinses Short spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE TIME SAVE ¹⁾
 Wool 40° - Cold	Machine washable wool. Hand washable wool and delicate fabrics with «hand washing» care symbol. max. 1 kg	Wash Rinses Short spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT
 Spin ³⁾	All fabrics The maximum load of the laundry is related to the type of laundry.	Drainage of the water Spin phase at the maximum speed.	SPIN REDUC-TION
 Drain	All fabrics The maximum load of the laundry is related to the type of laundry.	Drainage of the water	
 Rinse	All fabrics.	One rinse with additive spin phase	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE ⁴⁾

 Programme Temperature	Type of load max. weight of load	Cycle description	Functions
 Curtains 40° - Cold	Set this programme to wash curtains. It adds automatically the prewash phase to clean the dust from the curtains. Do not put the detergent into the pre-wash compartment. max. 2,5 kg	Prewash Wash Rinses Short spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE
 Jeans 60° - Cold	All items in jeans. Jersey made items with hi-tech materials. max. 3 kg	Wash Rinses Short spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE TIME SAVE ¹⁾
20 Min. - 3 kg 40° - 30°	Cotton and synthetic items with light soil or worn only one time.	Wash Rinses Short spin	SPIN REDUC-TION LIQUID DETERGENT
Cottons Eco  Economy ⁵⁾ 60° - 40°	White and fast coloured cotton with normal soil. max. 6 kg	Wash Rinses Long spin	SPIN REDUC-TION RINSE HOLD LIQUID DETERGENT EXTRA RINSE TIME SAVE ¹⁾

- 1) if you press the button 6 two times (Extra Quick duration), we recommend that you decrease the quantity of the load. It is possible to load fully the appliance, however the washing results are reduced.
- 2) The wash and spin phase is soft to prevent the creases of the laundry. The appliance adds some rinses.
- 3) The default phase of the spin speed is related to cotton items. Set the spin speed. Make sure that it agrees with the laundry.
- 4) Press EXTRA RINSE button to add rinses. With a low spin speed the appliance performs delicate rinses and a short spin.
- 5) Standard programmes for the Energy Label consumption values] according to regulation 1061/2010, the "Cottons Eco 60° C" and "Cottons Eco 40° C" are respectively the "standard 60° C cotton programme" and the "standard 40° C cotton programme". They are the most efficient programmes in terms of combined energy and water consumption for washing normally soiled cotton laundry.
Set this programme to have a good washing results and decrease the energy consumption. The time of the washing programme is extended. For cotton economy programmes you can set only the Extra Quick duration.

6.1 Woolmark Certificate



The wool wash cycle of this machine has been approved by The Woolmark Com-

pany for the washing of machine washable Woolmark product provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M1027
In UK, Eire, Hong Kong and India the Woolmark symbol is a certification trademark.

7. CONSUMPTION VALUES



The data of this table are approximate. Different causes can change the data: the quantity and type of laundry, the water and ambient temperature.

Pro-grammes	Load (kg)	Energy consumption (kWh)	Water consumption (litre)	Approximate programme duration (minutes)	Remaining moisture (%) ¹⁾ L60060T L1	Remaining moisture (%) ¹⁾ L60260T L1
Cottons 60 °C	6	1.20	55	150	60	53
Cottons 40 °C	6	0.70	55	120	60	53
Synthetics 40 °C	2.5	0.55	45	103	37	35
Delicates 40 °C	2.5	0.50	45	80	37	35
Wool/ Hand wash 30 °C	1	0.35	50	70	32	30
Standard cotton programmes						
Standard 60 °C cotton	6	1.09	46	249	60	53
Standard 60 °C cotton	3	0.80	41	159	60	53
Standard 40 °C cotton	3	0.67	42	146	60	53

¹⁾ At the end of spin phase.

Off Mode (W)	Left On Mode (W)
0.48	0.48
The information given in the charts above are in compliance with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC.	

8. BEFORE FIRST USE

Put a small quantity of detergent in the main wash compartment of the detergent dispenser. Set and start a programme for cotton at the highest tem-

perature without laundry. This removes all possible dirt from the drum and the tub.

9. USING THE APPLIANCE


1. Open the water tap.
2. Connect the mains plug to the mains socket.
3. Press button **1** to activate the appliance.
4. Put the laundry in the appliance.
5. Use the correct quantity of detergent and additives.
6. Set and start the correct programme for the type of laundry and soil.

1. Open the lid of the appliance.
2. Push the button A (depending on model). The drum opens automatically.
3. Put the laundry. Make sure to not put too much laundry into the drum.
4. Close the drum and the lid of your washing machine.




Before you close the lid of your appliance, make sure that you close the drum correctly.

9.1 Loading the laundry

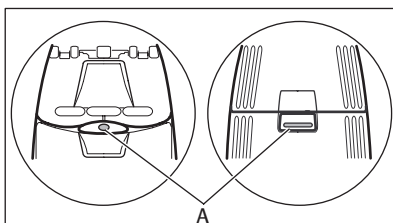

9.2 Using detergent and additives

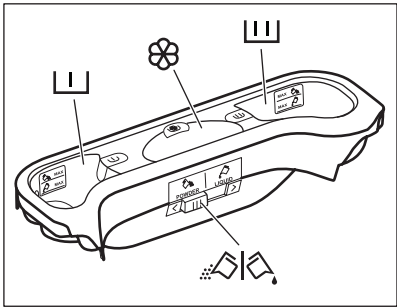

- Measure out the detergent and the fabric conditioner.



Detergent compartment for prewash phase.
The marks MAX are the maximum levels for the quantity of detergent (powder or liquid).



Detergent compartment for washing phase.
The marks MAX are the maximum levels for the quantity of detergent (powder or liquid).




Compartment for liquid additives (fabric conditioner, starch).
The mark M is the maximum level for the quantity liquid additives.




Flap for powder or liquid detergent.

Liquid or powder detergent


1.

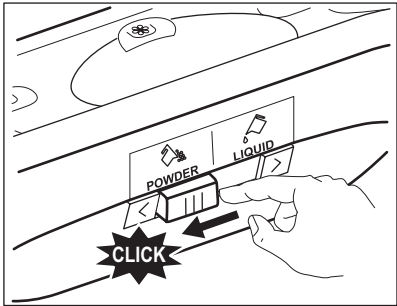


2.

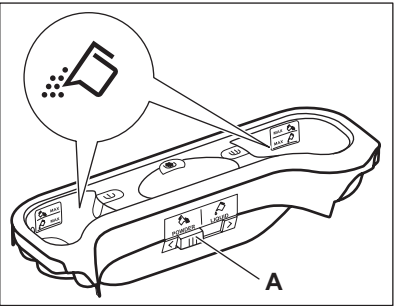

3.

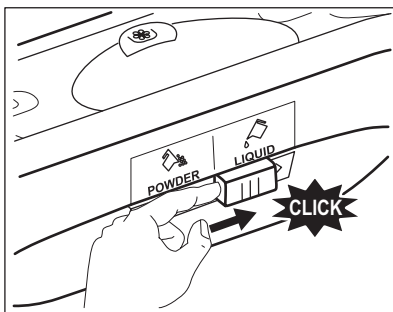

4.

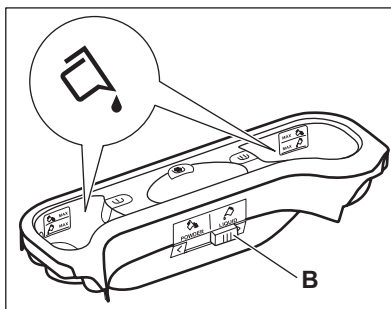

- Position **A** for powder detergent (factory setting).
- Position **B** for liquid detergent.



When you use the liquid detergent:

- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid then the maximum level.

9.3 Setting and starting a programme

1. Turn the programme knob.
2. The indicator of button **4** flashes with red colour.
3. The indicators of the default temperature and spin speed come on. To change the temperature and/or the spin speed, press the related buttons.
4. Set the available functions and the delay start. When you press the relevant button, the indicator of the set function comes on or the display shows the related symbol.
5. Press button **4** to start the programme. The indicator of button **4** is on with red colour.



The drain pump can operate for a short time when the appliance fills water.

9.4 Interrupt a programme

1. Press button **4**. The indicator flashes.
2. Press button **4** again. The washing programme continues.

9.5 Cancel a programme

1. Turn the programme knob to **Stop** to cancel the programme.
2. Turn again the programme knob to a new washing programme. At this time you can also set the available functions.



The appliance does not drain the water.

9.6 Change a function

You can change only some functions before they operate.

1. Press button **4**. The indicator flashes.
2. Change the function set.

9.7 Set the delay start

1. Press button **5** again and again until the display shows the number of minutes or hours. The related symbols comes on.
2. Press button **4**, the appliance starts the countdown of the delay start.

When the countdown is completed, the programme starts automatically.



Before you press button **4** to start the appliance, you can cancel or change the set of the delay start.

9.8 Cancel the delay start

1. Press button **4**. The related indicator flashes.
2. Press button **5** again and again until the display shows **0'**.
3. Press button **4**. The programme starts.

9.9 Open the lid

While a programme or the delay start operates, the lid is locked.

To open the lid:

1. Press button **4**. You can open the lid 2 minutes after the appliance stops. The door lock symbol in the display goes off.
2. Open the lid.
3. Close the lid and press button **4**. The programme or the delay start continues.



If the temperature and level of the water in the drum are too high, the door lock symbol stays on and you cannot open the lid. If necessary, do the following procedure to open the lid.

1. Deactivate the appliance.
2. Wait for some minutes.
3. Make sure that there is no water in the drum.



If you deactivate the appliance, it is necessary to set the programme again.

9.10 At the end of programme

- The appliance stops automatically.
- The acoustic signals operate.

- In the display **0** comes on.
- The indicator of the Start/Pause button **4** goes off.
- You can open the lid 2 minutes after the appliance stops. The door lock symbol goes off.
- Press button **1** to deactivate the appliance. After five minutes from the end of the programme, the AUTO OFF function automatically deactivates the appliance.



When you activate the appliance again, the display shows the end of the last set programme. Turn the programme knob to set a new cycle.

- Remove the laundry from the appliance. Make sure that the drum is empty.
- Keep the door ajar, to prevent mildew and odours.
- Close the water tap.

The washing programme is completed, but the 'Rinse Hold' function is on:

- The drum turns regularly to prevent the creases in the laundry.
- The door stays locked.
- You must drain the water to open the door.

To drain the water:

1. If necessary, decrease the spin speed.
2. Press the Start/Pause button **4**. The appliance drains the water and spins.
3. When the programme is completed and the door lock symbol goes off, you can open the door
4. Deactivate the appliance.



The appliance drains and spins automatically after approximately 18 hours.

10. HELPFUL HINTS AND TIPS

10.1 The laundry load

- Divide the laundry in: white, coloured, synthetics, delicates and wool.
- Obey the washing instructions that are on the laundry care labels.
- Do not wash together white and coloured items.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Empty the pockets and unfold the items.
- Turn inside out multilayered fabrics, wool and items with painted illustrations.
- Remove hard stains.
- Wash with a special detergent heavy soil stains.
- Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase.
- Do not wash in the appliance :
 - Laundry without hems or with cuts
 - Underwired bras.
 - Use a washing bag to wash small items.
- A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again.

10.2 Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you remove these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

10.3 Detergents and additives

- Only use detergents and additives specially made for washing machines.

- Do not mix different types of detergents.
- To help the environment, do not use more than the correct quantity of detergent.
- Obey the instructions that you find on the on packaging of these products.
- Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil.
- If you use liquid detergents, do not set the prewash phase.
- If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball.

10.4 Ecological hints

To help the environment, use less water and energy, obey these instructions:

- Set a programme without the prewash phase to wash laundry with normal soil.
- Always start a washing programme with the maximum load of laundry.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of the detergent, check the water hardness of your domestic system

10.5 Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To know the water hardness in your area, contact your local water authority. Obey the instructions that you find on the packaging of the products. Equivalent scales measure the water hardness:

- German degrees (°dH).
- French degrees (°TH).

- mmol/l (millimol for each litre - international unit for the hardness of water).
- Clarke degrees.

Water hardness table

Level	Type	Water hardness			
		°dH	°T.H.	mmol/l	Clarke
1	soft	0-7	0-15	0-1.5	0-9
2	medium	8-14	16-25	1.6-2.5	10-16
3	hard	15-21	26-37	2.6-3.7	17-25
4	very hard	> 21	> 37	>3.7	>25

11. CARE AND CLEANING



WARNING!

Disconnect the appliance from the mains supply before you clean it.

11.1 Descaling

The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales.

Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer.

Do this separately from the laundry wash.

11.2 External cleaning

Clean the appliance only with soap and warm water. Fully dry all the surfaces.

11.4 Detergent dispenser

To clean the dispenser:



CAUTION!


Do not use alcohol, solvents or chemical products.

11.3 Maintenance wash

With the low temperature programmes it is possible that some detergent stays in the drum. Make regularly a maintenance wash. To do this:

- Empty the laundry from the drum.
- Set the hottest cotton wash programme
- Use a correct quantity of powder detergent with biological properties.

After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out.

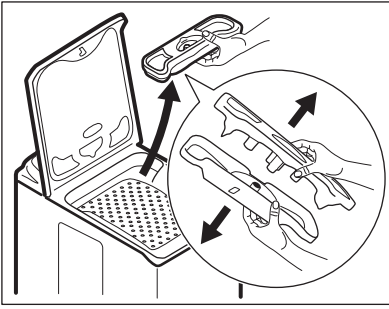

1. Remove the detergent dispenser and disconnect the two parts.
2. Clean all the parts with water.
3. Assemble the two parts of the detergent dispenser.
4. Put back the detergent dispenser.

11.5 Drain filter




Regularly examine the drain filter and make sure that it is clean.




WARNING!

- Disconnect the mains plug from the mains socket.
- Do not remove the filter while the appliance operates. Do not clean the drain filter if the water in the appliance is hot. The water must be cold before you clean the drain filter.

To clean the drain filter:

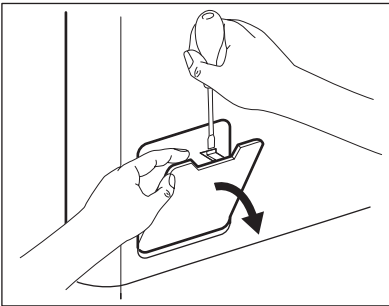

1. Open the drain filter door.

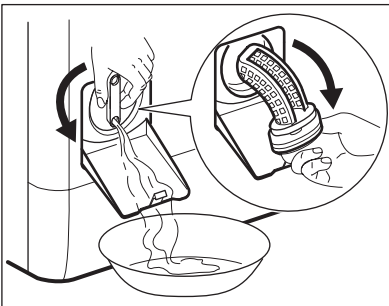

2. Put a container below the recess of the drain filter to collect the water that flows out. Turn the filter until it is vertical.
3. Turn the filter fully and remove it.
4. Remove fluff and objects.
5. Clean the filter with water.
6. Put it back and screw it in.
7. Make sure that you tighten correctly the filter to prevent leakages.
8. Close the drain filter door.


11.6 The inlet hose filter and the valve filter




WARNING!

- Disconnect the mains plug from the mains socket.


To clean the water inlet filters:

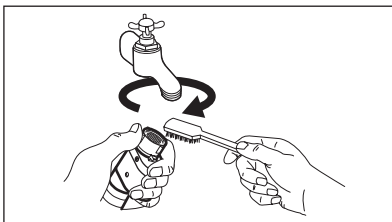

1. Close the water tap.
2. Remove the water inlet hose from the water tap.
3. Clean the filter in the inlet hose with a stiff brush.

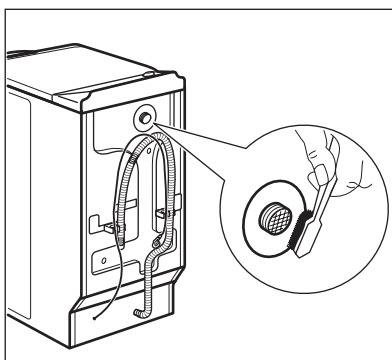

4. Remove the inlet hose behind the appliance.
5. Clean the filter in the valve with a stiff brush or a towel.

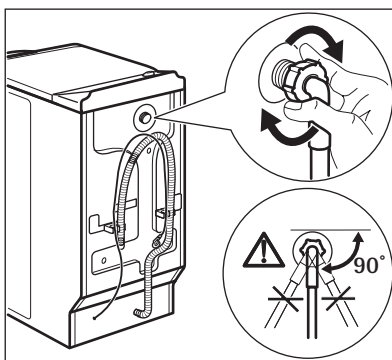

6. Install again the inlet hose. Make sure that the couplings are tight to prevent leakages.
7. Open the water tap.

11.7 Emergency drain

Because of a malfunction, the appliance cannot drain the water.

If this occurs, do steps (1) through (3) of 'To clean the drain filter'.

If necessary, clean the filter.

Put the drainage duct back and close the drain filter flap.

11.8 Frost precautions

If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump.

1. Close the water tap and disconnect the inlet hose.
2. Put the end of the inlet hose in a container and let the water flow out of the hose.
3. Do the Drain programme and let it operate until the end of the cycle.
4. Turn the programme knob to Stop to disconnect the appliance from the power supply.
5. Disconnect the appliance.

**WARNING!**

Make sure that the temperature is more than 0 °C before you use the appliance again.

The manufacturer is not responsible for damages caused by low temperatures.

12. TROUBLESHOOTING

The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table). If not, contact the service centre.

With some problems, the acoustic signals operate and the display shows an alarm code:

- **E10** - The appliance does not fill with water.

- **E20** - The appliance does not drain the water.
- **E40** - The appliance door is open or not closed correctly.
- **EFO** - The anti-flood device is on.

**WARNING!**

Deactivate the appliance before you do the checks.

Problem	Possible cause	Possible solution
The appliance does not fill with water.	The water tap is closed.	Open the water tap.
	The water inlet hose is damaged.	Make sure that the water inlet hose has no damages.
	The filters in the water inlet hose is blocked .	Clean the filters. Refer to 'Care and cleaning'.
	The water tap is blocked or is furred with lime-scale.	Clean the water tap.
	The connection of the water inlet hose is not correct.	Make sure that the connection is correct.
	The water pressure is too low.	Contact your local water authority.
The appliance does not drain the water.	The water drain hose is damaged.	Make sure that the water drain hose has no damages.
	The filter of the drain pump is blocked.	Clean the filter of the drain pump. Refer to 'Care and cleaning'.
	The connection of the water drain hose is not correct.	Make sure that the connection is correct.

Problem	Possible cause	Possible solution
	A washing programme without the drain phase is set.	Set the drain programme.
	The function Rinse & Hold is on.	Set the drain programme.
The appliance door is open or not closed correctly.		Close the door correctly.
The anti-flood device is on.		<ul style="list-style-type: none"> • Disconnect the appliance. • Close the water tap. • Contact the service centre.
The spin phase does not operate.	The spin phase is off.	Set the spin programme.
	The filter of the drain pump is blocked.	Clean the filter of the drain pump. Refer to 'Care and cleaning'.
	Balance problems with the laundry load.	Adjust manually the items in the tub and start the spin phase again.
The programme does not start.	The mains plug is not connected in the mains socket.	Put in the mains plug.
	Blow out fuse in the household fuse box.	Replace the fuse.
	You did not press button 4 .	Press button 4 .
	The delay start is set.	To start immediately the programme, cancel the delay start.
	The Child Lock function is activated.	Deactivate the Child Lock function.
There is water on the floor.	Leakages from the couplings of the water hoses.	Make sure that the couplings are tight.
	Leakages from the drain pump.	Make sure that the drain pump filter is tight.
	The water drain hose is damaged.	Make sure that the water inlet hose has no damages.
You cannot open the appliance door.	The washing programme is in operation.	Let the washing programme end.
	There is water in the drum.	Set the drain or the spin programme.

Problem	Possible cause	Possible solution
The appliance makes an unusual noise.	Incorrect level of the appliance.	Adjust the level of the appliance. Refer to 'Installation'.
	You did not remove the packaging and/or the transit bolts.	Remove the packaging and/or the transit bolts. Refer to 'Installation'.
	The load is very small.	Add more laundry in the drum.
The appliance fills with water and drain immediately.	The end of the drain hose is too low.	Make sure that the drain hose is in the correct position.
The washing results are not satisfactory.	The detergent you used was not sufficient or correct.	Increase the detergent quantity or use a different one.
	You did not remove the stubborn stains before you wash the laundry.	Use special products to remove the stubborn stains.
	Incorrect temperature was set.	Make sure that you set the correct temperature.
	Too much laundry load.	Decrease the laundry load.

After the check, activate the appliance.
The programme continues from the point of interruption.
If the problem occurs again, contact the service centre.

If the display shows other alarm codes, contact the service centre.

13. TECHNICAL INFORMATION

Dimensions	Width / Height / Depth	400 / 890 / 600 mm
	Total depth	600 mm
Electrical connection:	Voltage	230 V
	Overall power	2200 W
	Fuse	10 A
	Frequency	50 Hz
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture		IPX4
Water supply pressure	Minimum	0,5 bar (0,05 MPa)
	Maximum	8 bar (0,8 MPa)
Water supply ¹⁾		Cold water
Maximum load	Cotton	6 kg

Spin speed	Maximum	1000 rpm (L60060TL1) 1200 rpm (L60260TL1)
------------	---------	--

1) Connect the water inlet hose to a water tap with a 3/4" thread.

14. ENVIRONMENT CONCERNS

Recycle the materials with the symbol ♻️. Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic

appliances. Do not dispose appliances marked with the symbol 🗑️ with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



108805100-A-462012